

# MAINTENANCE GUIDE

## PRE-OILED FLOOR

Dust may be removed using a vacuum cleaner, dry cloth or soft broom. Use of the following products is mandatory because they are specially designed and made for pre-oiled flooring. Use of commercial detergents or other products will damage your floor.

### REGULAR MAINTENANCE

- 1| Vacuum or sweep floor to remove dust and sand.
- 2| Spray cleaner on the floor and spread evenly in thin coats using a flat microfiber mop.
- 3| Allow to dry.

### MAINTENANCE AS REQUIRED (MONTHLY)

- 1| Vacuum or sweep floor to remove dust and sand.
- 2| Spray the refresher on the floor and spread evenly in thin coats using a flat, microfiber mop.
- 3| Allow to dry.

Following the installation of the flooring, **wait 7 to 10 days** before cleaning the floor to ensure that hand-applied oil saturation was achieved.

**This product line made of oil and natural resin complies with regulations governing human health and environmental protection.**

