

# FINISHING GUIDE

## PREFINISHED FLOOR


### CLASSIC COLLECTION



Bromo



Evasion

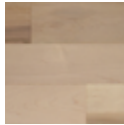

Haka



Krafla



Savane

### UNIQUE COLLECTION



Boreal



Foresta



Jeanine



Locus



Nix



Valorem

### GUIDE FOR ACCESSORIES

- 1| Thoroughly sand the surface with a 120 or 150 grit sandpaper and remove the residue with a clean rag.
- 2| **Step A** : Shake well the coloured base. Apply a thin coat with a brush until the colour is dark. Let dry eight hours.
- 3| Carefully sand with a 400 grit sandpaper and remove the residue with a clean rag.
- 4| **Step B** : Shake well the stain. Apply a coat with a clean rag.
- 5| Remove the excess stain with a sponge brush to obtain the desired colour.
- 6| Let dry four hours.
- 7| The amount of sanding will result in the final finish. If it is different than your floor, sand again and restart to step one.
- 8| Apply a clear varnish of the desired gloss.

