


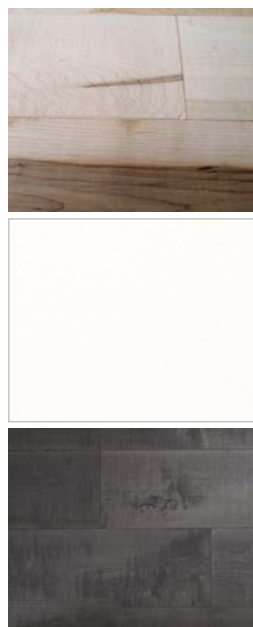

GUIDE FOR ACCESSORIES

- 1- Carefully sand with a 120 grit sandpaper and remove the residue with a clean rag.
- 2- **Step A** : Shake well the coloured oil (Primol) and pour a small quantity on a clean rag. Apply thin coats using circular motions.
- 3- Wait five to ten minutes and remove excess oil on the surface with another clean rag.
- 4- Let dry 24 hours.
- 5- **Step B** : Shake well the finishing oil (Greenol) and pour a small quantity on a clean rag. Apply thin coats using circular motions.
- 6- Wait five to ten minutes and remove excess oil on the surface with another clean rag.
- 7- Let dry 24 hours.



GUIDE FOR ACCESSORIES

- 1- Carefully sand with a 120 or 150 grit sandpaper and remove the residue with a clean rag.
- 2- **Step A** : Shake well the coloured base. Apply a thin coat with a brush until the colour is dark.
- 3- Let dry four hours.
- 4- Carefully sand with a 400 grit sandpaper.
- 5- **Step B** : Shake well the colored oil (Oilstain). Apply the product with a brush. Wait five to ten minutes and wipe until you obtain the desired colour.
- 6- Let dry at least one hour.
- 7- The amount of sanding done in step 4 will result in the final finish. If it is different than your floor, sand again and restart to step one.
- 8- **Step C** : If you are satisfied with the result, apply a thin coat of finishing oil (Oilcraft) and let dry 24 hours.